



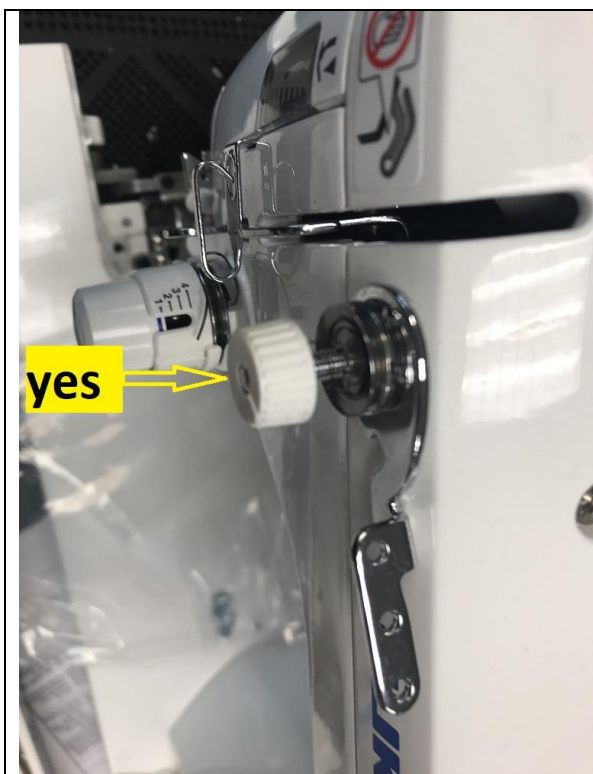

Be sure that the pretension is like this, flush with pin.

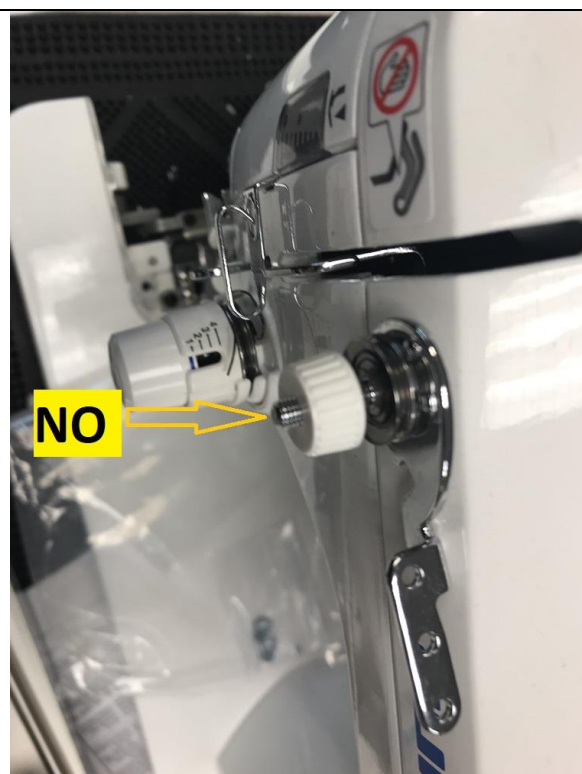

Not like this with pin protruding, even a little. Also check that your thread pulls smoothly through when the foot is up. No dragging this will affect the trimming.